


Halo Surface

Installationsmanual för montering av dikt takfäste (*Installation manual for mounting ceiling bracket*)


FLUX

FLUX AB | Mallslingan 26 | SE-18766 Täby
08-693 05 00 | www.flux.nu

Dikt takfäste (*Ceiling bracket*)

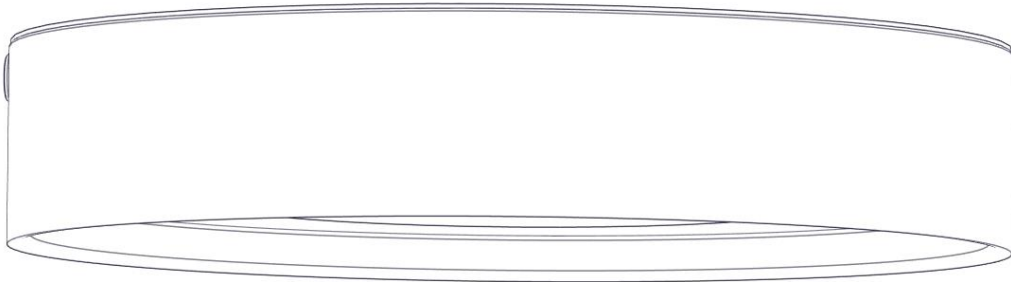

1

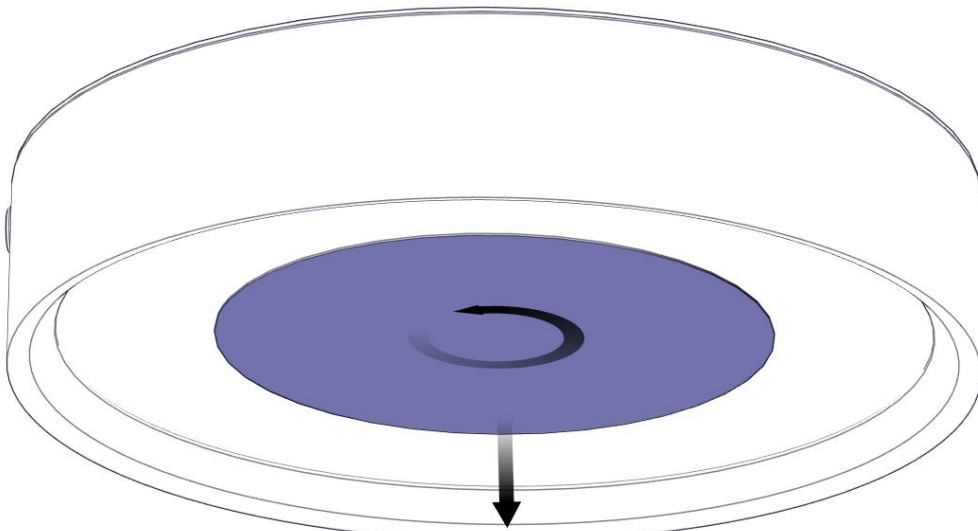


Halo Surface

Installationsmanual för montering av dikt takfäste (*Installation manual for mounting ceiling bracket*)


FLUX

FLUX AB | Mallslingan 26 | SE-18766 Täby
08-693 05 00 | www.flux.nu

2

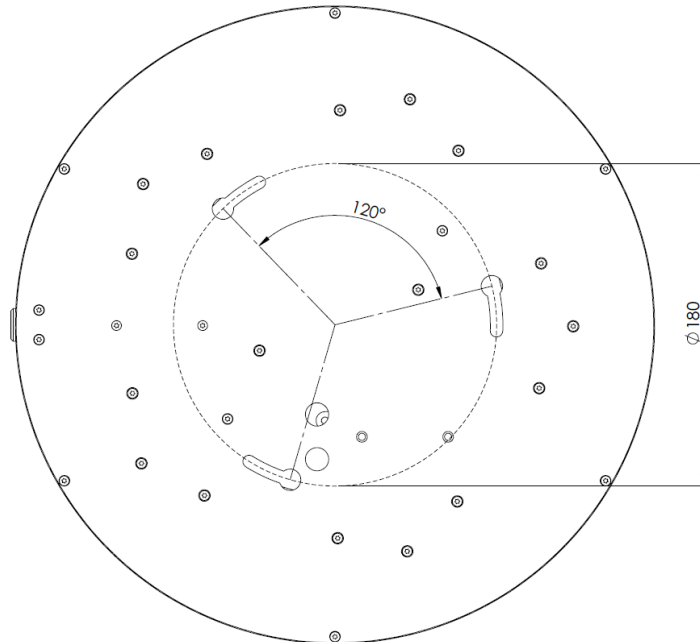

2.1

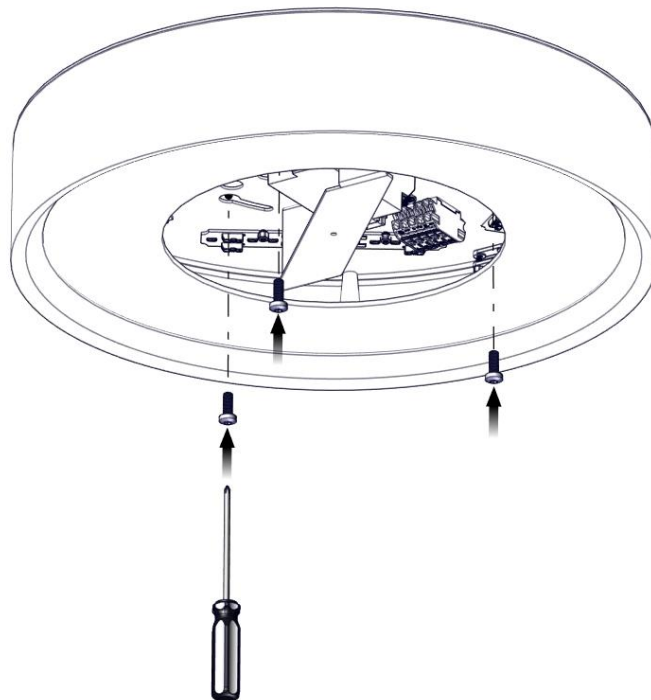

Halo Surface


Installationsmanual för montering av dikt takfäste (*Installation manual for mounting ceiling bracket*)

FLUX

FLUX AB | Mallslingan 26 | SE-18766 Täby
08-693 05 00 | www.flux.nu


3.1

Kabelutgång, sida (*Cable output, side*)

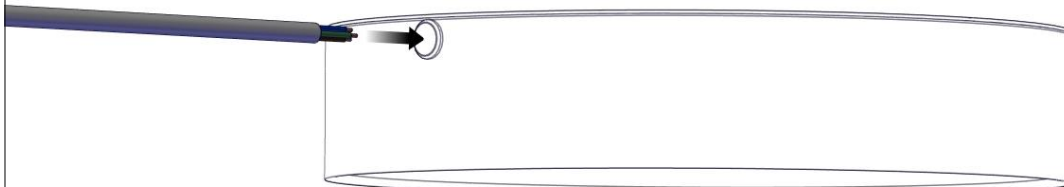


Plinten placeras på sidan för att kabeln lättare ska kunna anslutas

(The terminalblock is placed near the side to make it easier to connect)

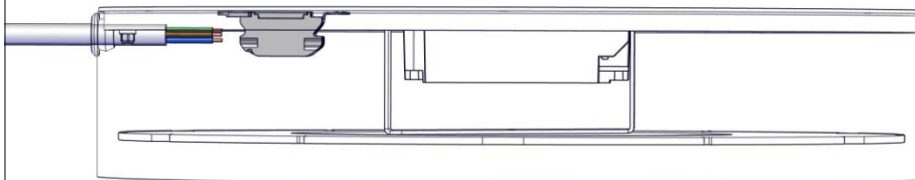


3.2

Kabelutgång, ovanifrån (*Cable output, above*)

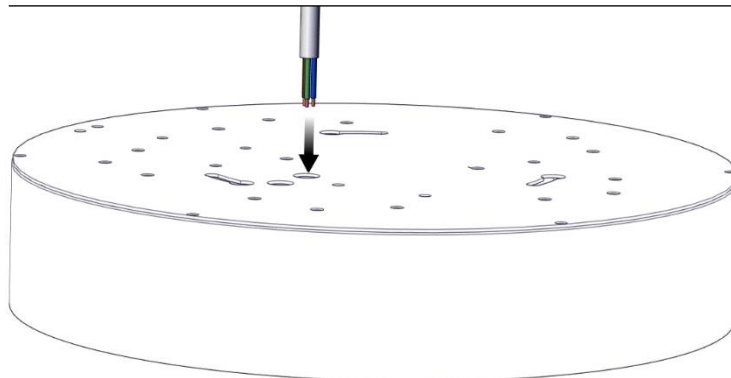

Plinten placeras i mitten nära kabelutgången för att kabeln lättare ska kunna anslutas

(The terminalblock is placed near the center and close to the cable output to make it easier to connect)

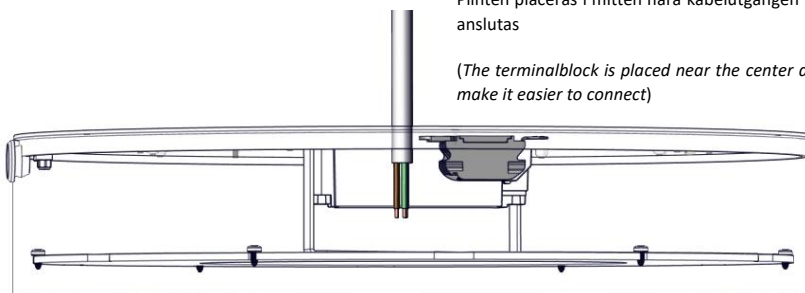


Halo Surface

Installationsmanual för montering av dikt takfäste (*Installation manual for mounting ceiling bracket*)

FLUX

FLUX AB | Mallslingan 26 | SE-18766 Täby
08-693 05 00 | www.flux.nu

4

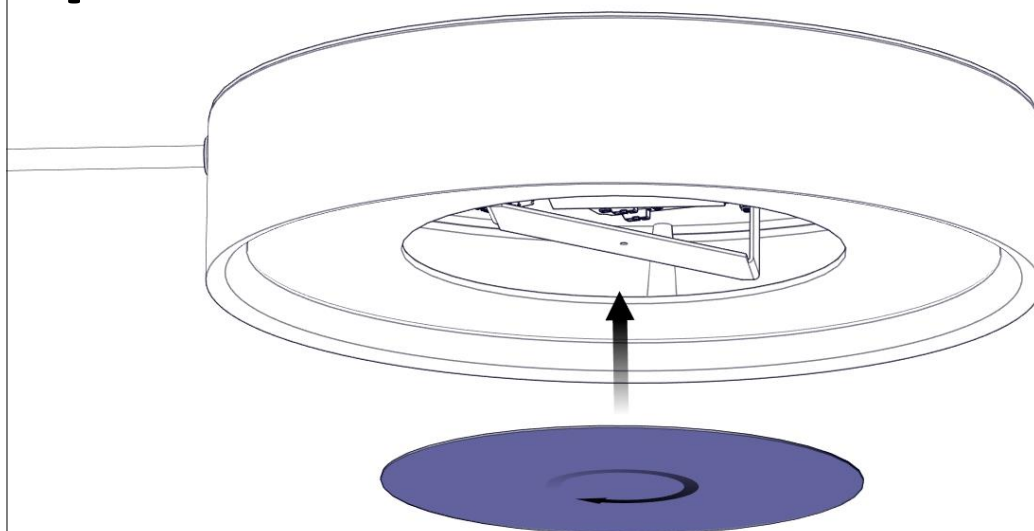

Ljuskällan ska enbart bytas ut av tillverkaren eller dess utsedda person.

(The light source shall only be replaced by the manufacturer or its designated person)

Armatur installation (*Luminaire installation*)

